

# **COLORATO**

[www.colorato.net](http://www.colorato.net)

## **INSTRUCTION MANUAL COMMERCIAL CHAMBER VACUUM SEALER**



**MODEL: CLVM-980CS**

Read carefully these instructions  
before using the appliance

**Thank you for purchasing the CLVM-980CS Vacuum Packaging Unit. With the help of the CLVM-980CS, you will now be able to keep food fresher longer in the refrigerator, freezer and pantry. The CLVM-980CS effectively removes air and extends freshness up to five times longer than normal preservation methods. Also, the CLVM-980CS can be used to preserve and organize household items like keepsakes, small toys and easy-to-lose items. You will soon find your CLVM-980CS to be so versatile and convenient, it will never leave your countertop.**

**The CLVM-980CS is a chamber vacuum system, which offers two distinct advantages over non-chamber, external bag type units. First, a much higher level of vacuum can be achieved, which means a longer shelf life for foods that you package. Secondly, liquids and liquid-rich foods can be effectively vacuum packaged. Foods like fresh meats, fish, soups, stews, etc. are no longer a problem to vacuum package. Marinated vegetables and meats are packaged quickly with ease, and no mess.**

**The CLVM-980CS Chamber Machine uses commercial technology. Simply place the pouch to be sealed inside the chamber and close the lid. Push start and the sealing process begins! First, the air is removed from the entire chamber and the vacuum pouch. Once the preset vacuum level is achieved, the pouch is sealed. Upon completion of the sealing cycle, air flows back into the chamber. Wait for the beep, and the process is complete.**

**With the CLVM-980CS, you can easily package a wide variety of sizes and shapes. Prep and store smaller, individual serving portions as well as bulk items. The maximum vacuum bag width is 300mm.**

## TABLE OF CONTENTS

IMPORTANT SAFEGUARDS.....	3
Vacuum Packaging and Food Safety.....	4
The vacuum sealer features.....	6
How to fill-drain the oil to pump.....	7
Maintenance.....	8
Packaging with vacuum bags.....	9
Operating instructions.....	9
Food storage & safety information.....	11
Troubleshooting.....	12

## **IMPORTANT SAFEGUARDS**

For your safety, follow these precautions when using your CLVM-980CS:

For safety transportation, the machines will be shipped without oil filling in. When the machine is used at the 1<sup>st</sup> time, it must be filled with oil first. And please use the special oil that is offered from machine provider and refer to the guideline that how to fill/drain oil to pump to implement this process.

- Read User's Manual guide carefully before using the machine for the first time.
- Do not use the CLVM-980CS on wet or hot surfaces, or near a heat source.
- Do not immerse machine or power cord in water or any other liquid.
- Plug CLVM-980CS into grounded power sources only, do not use extension cord.
- To disconnect, unplug directly from power source. Do not disconnect by pulling on cord.
- Do not operate appliance with damaged power cord.
- Only use the CLVM-980CS for its intended use.
- During the machine working, do not touch the vacuum lid, vacuum chamber and seal bar to avoid getting bruised, burns or damaging the machine.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Instructions shall be provided with the appliance so that the appliance can be used safely.
- No flammable or explosive gas surrounding.
- Maintain a distance of 10cm between the unit and walls or other objects for ventilation.
- Keep the machine away from the heat source or steaming device (such as steaming pot, dish washing machine or stove).

### **ATTENTION**



The symbol  on the product means that at the end of its life, the appliance has not to be considered as a common waste. It is a special waste and has to be demolished in specifies recovery and disposal areas, as prescribed by the EC Directive 2002/96/EC (WEEE). By disposing this product correctly, you can avoid negative consequences for the environment and for the human health, due to the presence of potentially dangerous substances in the product.

# Vacuum Packaging and Food Safety

Vacuum packaging extends the life of foods by removing most of the air from sealed containers and prevents fresh air escaping into the sealed containers, thereby reducing oxidation. Vacuum packaging helps preserve flavor and overall quality. It also helps inhibit the growth of aerobic microorganisms, which can lead to the problems noted below under certain conditions:

**Mold** – Mold cannot grow in a low oxygen environment; therefore vacuum packaging can virtually eliminate it.

**Yeast** – Results in fermentation, which can be identified by smell and taste. Yeast needs water, sugar and a moderate temperature to grow. It can also survive with or without air. Slowing the growth of yeast requires refrigeration, while freezing stops it completely.

**Bacteria** – Results in an unpleasant odor, discoloration and/or soft or slimy texture. Under the right conditions, clostridium botulinum (the organism that causes Botulism) can grow without air and cannot be detected by smell or taste. Although it is extremely rare, it can be very dangerous.

As with any other storage container, it is important to inspect food for spoilage prior to consuming.

To preserve foods safely, it is important to maintain low temperatures. You can significantly reduce the growth of microorganisms at temperatures of 4°C or below. Freezing at -17°C does not kill microorganisms, but stops them from growing. For long-term storage, always freeze perishable foods that have been vacuum packaged.

It is important to note that vacuum packaging cannot reverse the deterioration of foods. It can only slow down changes in quality. It is difficult to predict how long foods will retain their top-quality flavor, appearance or texture because it depends on the age and the condition of the food on the day it was vacuumed packaged.

Note: vacuum packaging is not a substitute for refrigeration or freezing. Any perishable foods that require refrigeration must still be refrigerated or frozen after vacuum packaging.

## **Preparation Guidelines**

Vegetables need to be blanched before vacuum packaging. This process stops the enzyme action, which leads to loss of flavor, color and texture. To blanch vegetables, place them in boiling water or in the microwave until they are cooked, but still crisp. Then, immerse the vegetables in cold water to stop the cooking process. Finally, dry the vegetables on a towel before vacuum packaging.

Cruciferous vegetables (broccoli, sprouts, cabbage, cauliflower, kale, turnips) naturally emit gases during storage. Therefore, after blanching, they must be stored in the freezer only.

# The Vacuum Sealer Features



Vacuum gauge



-.0-

**A. On/Off Button (ON/OFF)**

After the machine is plugged in, LED display (G) will show “OFF” .Press the “ON/OFF” button, LED display (G) will show the time (the last setting). Now the machine is ready to work. After using the machine, press the “ON/OFF” button before unplug the machine. During the working processes, press the “ON/OFF” button to stop any process.

**B. Auto Vacuum Button (START)**

After closing the lid, if the machine cannot work automatically, press “START” button, machine will vacuum and seal automatically.

**C. Seal Button (SEAL)**

Press “SEAL” button to stop vacuum cycle and instantly seal the bag to prevent crushing delicate items.

**D. Setting Button (SET)**

When the lid is open, press this button to activate the setting of vacuum time, seal time and marinate. Press the button “^” or “v” to adjust the time of each setting.

**E. Vacuum Gauge**

Shows the vacuum level inside the vacuum chamber.

**F. Indicate light**

1. When the lid is open, and the indicate light is on, press the button “^” or “v” to adjust the time of each setting.
2. In the operation, the relative indicate light is on, which means that setting is adjusted last time.

**G. LED Display**

1. Show the vacuum time/seal time/marinate time.
2. When vacuum and seal is finished, or after pressing ON/OFF button when the machine is power on , if the vacuum lid is not open, the LED display will show “CLO”.

**H. Time adjusting button (“^” “v”)**

When the lid is open, press the button “^” or “v” to adjust the time of each setting.

**Technical Data**

Voltage : 220-240V / 50Hz

Power : 950W

Vacuum pump : oil pump

Pressure : -29.9”Hg / -1012mbar (+0-3%) directly in pump

-29.8”Hg/-1009mbar (±3%) in vacuum chamber

Seal wire width : 5 mm

Max bag width : 300mm

Size : 425x359x356mm


## How to fill-drain the oil to pump

Below occasions need to fill oil to pump

- 1) At the first time to use the machine, it needs filling oil to the pump. And after using the machine for 25 hours at 1<sup>st</sup> time, it needs filling oil again.
- 2) When the oil volume in pump is under the lowest level, it needs filling oil.
- 3) The performance of machine is worsening seriously, it needs filling oil.
- 4) After the machine has been using for 60 hours or half year, it must be filled.


Steps of filling oil:

- 1) Use the screw driver to open the back cover, and the pump can be seen.
- 2) Twist off the screw cap (the red one)
- 3) Filling the oil to pump via the oil bottle until the oil in pump stays at 1/2~3/4.
- 4) Tighten the screw cap.
- 5) Reinstalling the back cover

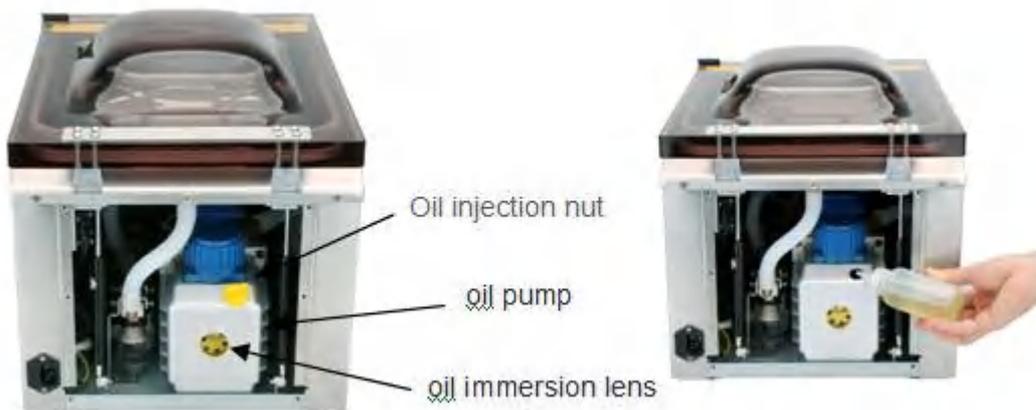

Steps of draining oil

- 1) Prepare a container and put it under the oil draining port directly.
- 2) Use the spanner (which is offered by factory) to twist off the screw cap anticlockwise, then the oil starts draining.
- 3) After all the oil is drained, screw tight the cap.

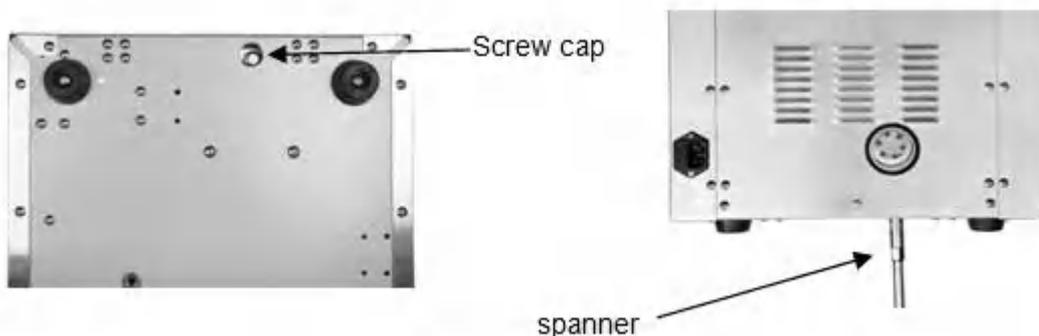

Note:

- 1) Please make sure the machine is in a good condition of ventilation. That is because that it will be harmful to human health with long-term effects of inhaling the gas (that might be containing residual oil) which is expelling from pump during the operation.
- 2) Please take care of the drained oil according to the environmental regulations.
- 3) After finish oil filling, please make sure the machine is placed in normal position. Don't tip it over or let it be lying on its side.

## Maintenance

- Unplug before cleaning.
- Regularly clean appliance with damp cloth and mild soap to remove crumbs, dust, debris.

## Getting Started with Vacuum Packaging

If you are part of the food processing or food service industry, there is a good chance that you already know the advantages of vacuum packaging. It has been used with success for many years as a safe and cost effective method for extending shelf life and maintaining the quality of food products. If vacuum packaging is new to your home or business, you will soon wonder how you lived without it!

Whether you are a beginner or expert, there are certain basic guidelines that should always be followed in order to package foods safe to eat. Neglecting these basic guidelines can result in food spoilage, and in some cases, illness or death.

Once you familiarize yourself with the CLVM-980CS procedures, you will feel at ease using the Chamber Machine and enjoy a higher quality of stored foods.

- Package only fresh foods. Do not package old or rancid foods. An already bad product does not improve with vacuum packaging.
- Fresh foods (Meats, vegetables, cheeses, etc.) should be refrigerated at 34°F or below or frozen after vacuum packaging.
- Vacuum packaging removes a high percentage of air. This slows the growth of most living microorganisms, which degrade food, such as aerobic bacteria and molds. However, some forms of bacteria such as clostridium botulinum (responsible for botulism) are anaerobic and grow in the absence of oxygen.
- The foods susceptible to botulinum should be refrigerated for a short term and frozen for long-term storage. Consume immediately after heating.
- Vegetables such as cauliflower, broccoli and cabbage will emit gasses when vacuum sealed. To prepare these foods for vacuum packaging, you must blanch them first.
- All perishable foods must be refrigerated or frozen to prevent spoilage.
- Vacuum packaging is not a substitute for canning.

# Packaging with Vacuum Pouches

With the CLVM-980CS, you can easily package a wide variety of sizes and shapes. You can also prep and store smaller individual serving portions as well as bulk items.

- Keeps food fresh 3-5 times longer than conventional storage bags.
- Several sizes available to meet your packaging needs.
- Terrific for hundreds of applications in and out of the kitchen.
- Safe for freezer, refrigerator and microwave use. Pouches can also be boiled.
- Pouch thickness available in standard 3mil or heavy duty 4mil.
- Pouches are economically priced, giving you a better value.
- Vegetables must be blanched before being packaged. Place in boiling water or microwave until heated through but still crunchy. Vacuum package as normal.

## Operating Instructions

***Read all instructions before operating CLVM-980CS.***

### 1. Select Vacuum Pouch

Select the proper size vacuum pouch. Allow a minimum of 1" to 2" of extra headspace at the top of the pouch to ensure quality, air-tight seal.

### 2. Plug machine into grounded electrical outlet.

The LED on the control panel will read "OFF".

### 3. Press "ON/OFF" button

- When the vacuum lid is open, LED display will show the last setting of vacuum time, sealing time or marinate time. Put the vacuum bag with food into the vacuum chamber directly, and then close the vacuum lid. The machine will work automatically.

- When the vacuum lid is close, LED display will show "CLO". Open the vacuum lid first, and then put the vacuum bag with food in to the vacuum chamber, close the vacuum lid. The machine will work automatically.

***Notes: When LED display shows "CLO", the machine is in protection status. In this status, no matter which button you are pressing, the machine will not work. Open the vacuum lid then the machine can return to normal operation.***

### 4. Adjust / Set Timing Controls

- **Vacuum Time:** Keep the lid open, press the SET button and make sure the indicate light of Vac Time is on. Press "Λ" or "∇" button to increase or decrease vacuum time. For the initial test, set the vacuum time to 30 seconds. Adjust vacuum time accordingly to achieve the vacuum required. Depending on the pouch size and the amount of product in the package, the vacuum time can vary from 5-90 seconds.

- **Sealing Time:** Keep the lid open, press the SET button and make sure the indicate light of Seal Time is on. press "Λ" or "∇" button to increase or decrease seal time. For the initial test, set seal time to 5 seconds. Adjust the time accordingly to achieve a perfect seal, the seal time can vary from 0-6 seconds.

- **Marinate Time:** The default marinate time is 9 minutes, and users can press "Λ" or "∇" to adjust the marinate time from 9 to 99 minutes according to the actual need. ( One cycle will be last for 9 minutes )

***Note: All time adjustments must be made with machine power "ON", plus make sure the lid is open.***

## 5. Fill pouch and place in chamber

- a. Keep pouches that contain liquids or wet product below the height of the seal bar.
- b. Open the clamp, put the pouch into the chamber, and make sure the opening of pouch cross the seal bar and be locked by the clamp

**NOTE: The entire pouch, including the opening must remain inside the chamber.**

## 6. The Process (Vacuum and Seal)

- a. Close the vacuum lid, the machine will vacuum and seal automatically.
- b. When the vacuum lid is closed, the machine will enter vacuum process automatically, the number on LED display will count down from preset value (Vacuum time) to 0.
- c. When the vacuum is finished, the machine will seal automatically. The number on LED display will count down from preset value (Seal time) to 0.
- d. Air is let back into chamber. You will notice the bag tighten around the product in the vacuum pouch.
- e. When the machine BEEPS the cycle is complete.

## 6' The Process (Vacuum and Marinate)

If marinate mode is selected, when close the lid, the machine will enter to vacuum-marinate working mode automatically. One cycle will include a few processes—1 min for vacuuming, 8 mins for maintaining the status of vacuum, and then air comes back to chamber again for next cycle. When the working is finished, the machine will exude the buzzing sound. After that, open the lid and take out the food for next making process if necessary.

## 7. Pouch Inspection

**Vacuum** – check the quality of the vacuum by looking at the tightness of the pouch and the product. If you notice air pockets increase the vacuum time by 5 seconds, test again. The vacuum time could take up to 60 seconds depending on the pouch size and the volume of the product being packaged.

**Seal** – Inspect the pouch seal.

**Note: A positive seal will look “clear” upon inspection. If the seal is “spotty or incomplete” increase the sealing time by 1 second. If the seal is “white or milky” decrease the seal time by 1 second.**

## Restoring defaults

When the machine is power on and it displays OFF, press SEAL+SET button simultaneously for 3 seconds. When the machine sounds DE and displays rS, then it is successful to restore the defaults setting.

## Food Storage and Safety Information

The CLVM-980CS will revolutionize the way you buy and store food. Because vacuum packaging works to eliminate freezer burn and slow food spoilage, you are now able to take advantage of buying food in bulk without the threat of food waste.

Vacuum packaging with the CLVM-980CS removes up to 90% of the air from the package. This will help keep food fresher up to 5 times longer than under normal circumstances. Dry foods like pasta, cereals and flour will stay fresh from start to finish. Plus vacuum packaging prevents weevils and other insects from infesting dry goods. Package only the freshest foods possible.

However, please keep in mind that not all foods benefit from vacuum packaging. Never vacuum package garlic or fungi like mushrooms. A dangerous chemical reaction takes place when air is removed, causing these foods to be dangerous if ingested. Vegetables should be blanched before packaging to kill any enzymes that may cause deterioration of out-gassing when vacuumed.

<b>Foods</b>	<b>Vacuum Freezer storage</b>	<b>Vacuum Fridge storage</b>	<b>Typical storage</b>
<b>Fresh Beef &amp; Veal</b>	1-3 years	1 month	1-2 weeks
<b>Ground meat</b>	1 year	1 month	1-2 weeks
<b>Fresh Pork</b>	2-3 years	2-4 weeks	1 week
<b>Fresh Fish</b>	2 years	2 weeks	3-4 days
<b>Fresh Poultry</b>	2-3 years	2-4 weeks	1 week
<b>Smoked meats</b>	3 years	6-12 weeks	2-4 weeks
<b>Fresh Produce, Blanched</b>	2-3 years	2-4 weeks	1-2 weeks
<b>Fresh Fruits</b>	2-3 years	2 weeks	3-4 days
<b>Hard Cheeses</b>	6 months	6-12 weeks	2-4 days
<b>Sliced Deli Meats</b>	Not recommended	6-12 weeks	1-2 weeks
<b>Fresh pasta</b>	6 months	2-3 weeks	1 week

# Troubleshooting

Under the proper circumstances, your CLVM-980CS will give you top-notch vacuum performance. In some instances, problems may arise. Please consult the troubleshooting menu before calling customer support.

## **CLVM-980CS will not turn on**

- Ensure that the machine is properly plugged into a grounded outlet.
- Check the power cord for tears and frays. Do not use machine if power cord is damaged.
- Make sure the ON/OFF button was properly pressed. LED screen will be illuminated when on.

## **CLVM-980CS does not pull a complete vacuum with pouch**

- Vacuum/seal time may not be set high enough. Set vacuum and seal time higher and vacuum again.
- To vacuum and seal properly, the opening of pouch must be within the vacuum chamber.
- If packaging from a roll pouch, make sure first seal is complete and there are no gaps in either seal.
- CLVM-980CS and vacuum pouch need to be clean, dry and free of debris for the vacuum process to be successful. Wipe surface of seal bar and inside of pouch and try again.

## **Vacuum pouch loses vacuum after being sealed**

- Sharp items can puncture small holes in pouches. To prevent this, cover sharp edges with paper towel and vacuum in a new pouch.
- Some fruits and vegetables can release gases (out-gassing) if not properly blanched or frozen before packaging. Open pouch. If you think food spoilage has begun, discard food. If food spoilage has not yet begun, consume immediately. If in doubt, discard food.

## **CLVM-980CS is not sealing pouch properly**

- Seal time may not be long enough. Increase seal time and try again.
- Pouches will not seal if any moisture, food particles or debris are present in the seal area. Wipe the inside of the pouch clean and try again.
- Pouch must be properly placed along the seal bar. Make sure the entire pouch is over the seal bar and there are no wrinkles in pouch material.

## Error Code and Troubleshooting

Error code	Causes	Troubleshooting
E01	When the machine is vacuuming for some time, the pressure switch doesn't close.	Check if the lid is closed tight.
		Check if the gasket is installed in right position.
		Check if the pump is working or not.
		Check the pressure switch system is in normal working or not (hose, pressure switch and 10P data cord)
E02	When the machine goes into sealing mode, the micro switch doesn't close.	Check if the lid is closed tight.
		Check if the micro switch system is in normal working or not (GAS1 cable, micro switch, 10P data cord)
LP	When the machine is vacuuming for some time, the pressure switch doesn't close.	Check the power supply.
		Check the power supply system of machine(power cord, 10P data cord)