




www.colorato.net

**INSTRUCTION MANUAL
COMMERCIAL PIZZA OVEN**

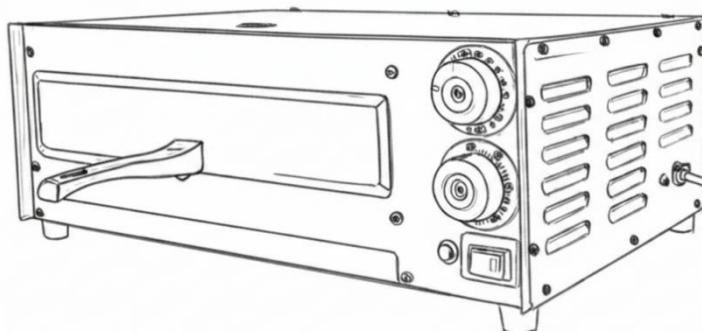

MONTEAO: CLPO-145SM

Read carefully these instructions before using the appliance and keep them for future reference

IMPORTANT SAFETY INFORMATION

This manual contains important information regarding safe operation of your snack oven. Please read thoroughly before equipment setup, operation, or maintenance.


Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty!

Precautions for Usage

- Be sure the pizza is in the right cooking pan before you put it into the machine.
- Do not come in direct contact with hot surfaces.
- Avoid cooking oversized foods.
- Keep the top of the unit clear. Do not store items on top of the unit.
- Do not stack ovens on top of each other.
- Do not cook greasy foods; grease may damage the heating coils.
- Only plug into a 3 prong grounded outlet. Forcing the unit into another plug may cause an electrical hazard.
- Do not plug in, unplug, or operate the unit with wet hands at risk of electrical shock.
- Keep the unit, plug, and cord clear of liquid and do not immerse any part in liquid.
- When idle or cleaning, unplug the unit from outlet.
- Never leave the oven unattended during operation.
- This unit is not to be used for anything other than its intended use.
- Do not operate this oven outdoors.
- Keep unit and surrounding area clean and dry. Operate only on firm, level surfaces with 12" of clearance on the top and all sides.
- Do not use the unit if it is damaged, if the cord and plug is damaged, or if there is a malfunction at any time.
- Children and animals should be kept away from this unit.
- Only allow authorized professionals to conduct repairs. Incorrect installation, alterations, adjustments, and maintenance can lead to property loss and injury.
- Ensure the unit has a designated power supply of correct voltage and is adequate for continued usage.
- Opening or removing the cover of this unit will void the warranty.

Handle Assembly Instructions

1. Line up the unit handle and panel together.

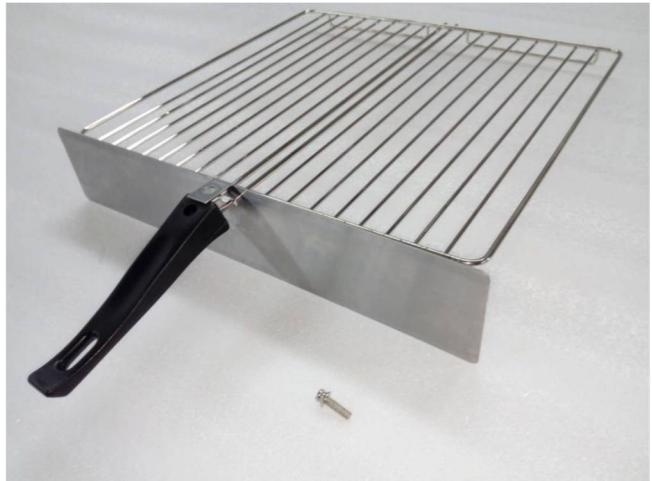

2. Put the net upside down (the flanging downward).
3. Being sure that the handle and door is like below position, push the handle into net and make the holes in both parts overlapping.



4. Secure tightly with the included screw from behind the panel.

Cooking Function Symbols

SWITCH – On/Off for main power.

TIMER – Control the working time (max. 15 minutes).

TEMPERATURE KNOB – Turn the knob to your desired temp (300 °C), the heaters begin work.

WORKING INDICATOR – Indicate the heating element working on. When the indicator is off, the temperature reaches your setting point.

Usage Instructions

1. Plug in the unit.
2. Turn on the main SWITCH.
3. Set the desired cooking time by turning the knob of the TIMER.
4. Turn the TEMPERATURE KNOB to your setting temperature.

IMPORTANT: MAINTAIN CONSTANT SUPERVISION OF THE OVEN WHILE IN USE!

5. When the WORKING INDICATOR is off, the temperature reaches your setting point, put the pizza inside the oven.

NOTE: When the TIMER reaches its off position, the power is off.

6. Caution should be used when removing food from the oven. Oven mitts or other protective gear should be used to avoid skin contact with the hot panel.
7. Unplug the oven when not in use.

Cleaning Instructions

NOTE: To maintain cleanliness and increase life of the unit, the oven should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical components of the unit, it may cause a short circuit or electrical shock.

Use caution while cleaning as there may be sharp edges on or inside of the unit.

1. Allow unit to completely cool before cleaning.
2. Disconnect the cord from the outlet.
3. Slide out the crumb tray and remove any food debris or other soil.
4. Wipe the crumb tray with a damp cloth.
5. Return the crumb tray to its proper position.
6. Wipe the outside of the unit with a damp cloth, then wipe dry. To avoid damage, do not use abrasive cleaners or scouring pads. If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleaning. Chemical residue could damage or corrode the surface of the unit.

| TECHNICAL PARAMETERS | |
|-----------------------------|----------------|
| Model: | CLPO-145SM |
| Power: | 1450 W |
| Voltage / Frequency: | 230 V / 50 Hz |
| Product dimensions: | 460x375x190 mm |
| Chamber size: | 330x330 mm |
| Net weight: | 6,5 kg |

ATTENTION

The symbol  on the product means that at the end of its life, the appliance has not to be considered as a common waste. It is a special waste and has to be demolished in specifies recovery and disposal areas, as prescribed by the EC Directive 2002/96/EC (WEEE). By disposing this product correctly, you can avoid negative consequences for the environment and for the human health, due to the presence of potentially dangerous substances in the product.