


COLORATO

www.colorato.net

INSTRUCTION MANUAL COMMERCIAL PIZZA OVEN

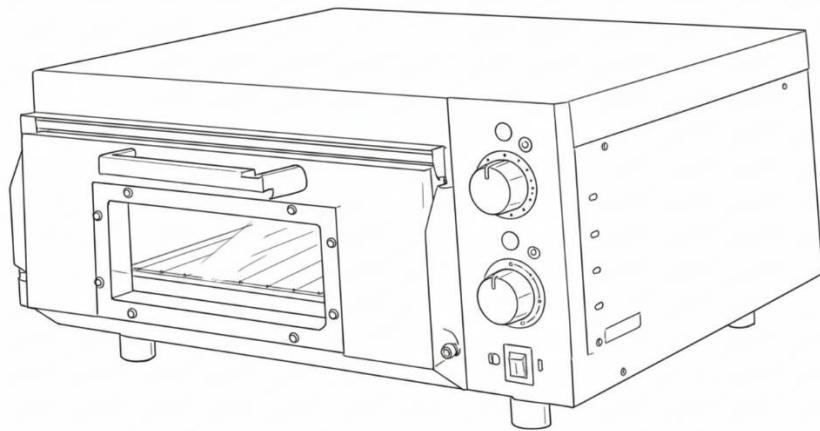

MODEL: CLPO-200S

Read carefully these instructions before using the appliance and keep them for future reference

INFORMATION

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

NOTE!

Read the instruction manual carefully before using the device. The manufacturer does not accept liability for any damage or malfunction resulting from not following the instructions for use.

The instruction manual should be kept near the device, easily accessible for anyone wishing to work with or using it. We reserve the right to make technical changes for purposes of developing and improving the useful properties.

NOTES FOR USE

1. The appliance may only be installed and connected to the power supply, maintained, and repaired by a qualified electrician in accordance with safety regulations. Do not repair or replace any part of the appliance unless specifically recommended in this manual.
2. Work performed incorrectly puts your safety at risk.
3. This appliance is for commercial use only. Use for any other purpose is at the owner's risk and could be dangerous. The manufacturer can't be held responsible for damage caused by improper use of this appliance.
4. CAUTION: Keep children away from this appliance.
5. Do not leave children alone - children should not be left alone or unattended in area where appliance is in use. They should never be allowed to sit or stand on any part of the appliance.
6. Flammable materials should not be stored near surface units.
7. Do not move the appliance while hot.

INSTALLATION

Check that mains voltage and power cable ratings are as per the indications provided on the label.

This label must never be removed.

It is obligatory for the electrical system to be grounded according to the methods required by safety rules.

If a plug and socket connection is being used make sure that the plug and socket are compatible. Avoid use of adapters and shunts as these could cause overheating and risk of burns.

If a fixed connection is being used fit power line with an omni polar circuit breaker with a contact opening gap equal to or greater than 3 mm in an easily accessible position in proximity to the oven.

Cooking Function Symbols

TEMPERATURE KNOB – Turn the knob to your desired temp., the heaters begin work. When the indicator is off, the temperature reaches your setting point.

SWITCH –One switch is on/off for main heaters. Another is on/off for inner lamp.

Cooking Pizza

The Oven is intended to cook fresh or deep-frozen Pizza.

IMPORTANT: MAINTAIN CONSTANT SUPERVISION OF THE OVEN WHILE IN USE!

Caution should be used when removing food from the oven. Oven mitts or other protective gear should be used to

avoid skin contact with the hot panel.

Selecting a cooking level

– Turn the temperature knob to the desired cooking temperature.

Unplug the oven when not in use.

Cleaning Instructions

- Before cleaning, turn off the appliance.
- Wait until the oven has cooled down before you start cleaning it.

Routine cleaning

- Cleaning the appliance thoroughly on a daily basis is the key to keep it in perfect working condition and prolonging its life. Clean the appliance with a damp cloth using water and soap or detergents, provided that they are not acid or abrasive as discussed further above.
- Such detergents should not even be used to wash the floor near the appliance, as their fumes may deposit on the steel surfaces and damage them.
- If the deep fat oven is very dirty, use a synthetic scrub sponge. Rinse it off with clean water and wipe it dry with a clean cloth. Do not rub the appliance with steel wool pads as they could leave rust stains. For the same reason, avoid touching the appliance with ferrous objects.
- In order to prevent corrosion spots from forming, ensure that any salt residues are carefully removed from the tank's sides and bottom.
- Never use direct water jets to clean the appliance because this could result in water entering into it and damaging it.

Prohibited use

The manufacturer cannot be held liable for any faults caused by defective installation or inappropriate use of the appliance.

In such cases, the warranty shall be null and void.

| TECHNICAL PARAMETERS | |
|-----------------------------|----------------|
| Model: | CLPO-200S |
| Power: | 2000 W |
| Voltage / Frequency: | 230 V / 50 Hz |
| Product dimensions: | 685x665x270 mm |
| Chamber size: | 500x500x115 mm |
| Firestone size: | 500x500 mm |
| Net weight: | 32 kg |

ATTENTION



The symbol on the product means that at the end of its life, the appliance has not to be considered as a common waste. It is a special waste and has to be demolished in specifies recovery and disposal areas, as prescribed by the EC Directive 2002/96/EC (WEEE). By disposing this product correctly, you can avoid negative consequences for the environment and for the human health, due to the presence of potentially dangerous substances in the product.